
Transition

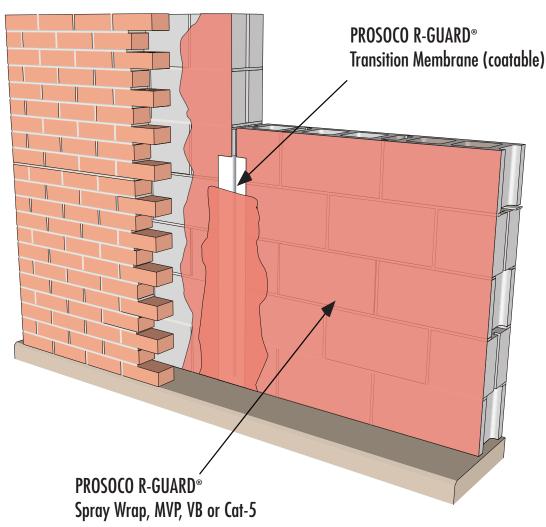

CMU Control Joint with Transition Membrane and Spray Wrap, MVP, VB or Cat-5

www.prosoco.com

PROSOCO SINCE 1939



Step A. Install transition membrane Step B. Overcoat transition membrane with Spray Wrap, MVP, VB or Cat-5